



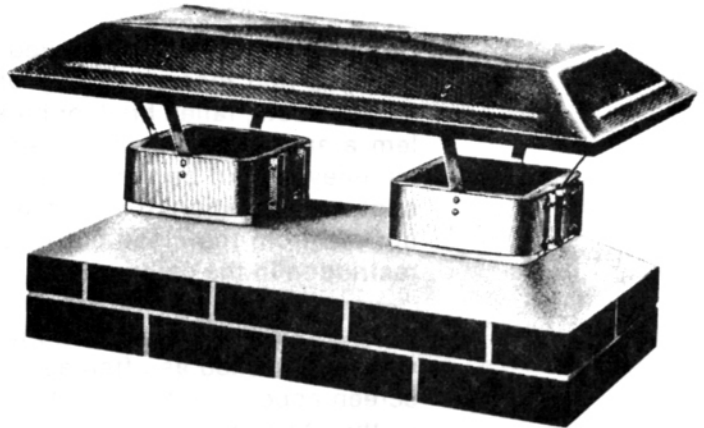

## "CLAMP-TO-TILE"

ATTACH SUPPORT  
BRACES TO  
INSIDE OF  
BAND.

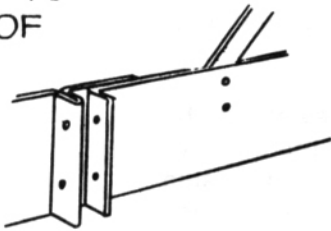

### STEP 1

One 3" clamp band is  
made for each tile.

### STEP 2

Draw each band snug  
around each liner  
extension.

## INSTRUCTIONS FOR INSTALLING BIRD GUARD

- (1) Form guard to fit around  
outside of flue tile.
- (2) After cover is assembled,  
but before installing, insert  
guards up against underneath  
side of cover.
- (3) After installing cover, wire  
guard securely to each brace.

