

STOCK NO. 234-H

**INSTRUCTIONS for Assembling and Installing
"Kwick-Clamp" Chimney Cover**

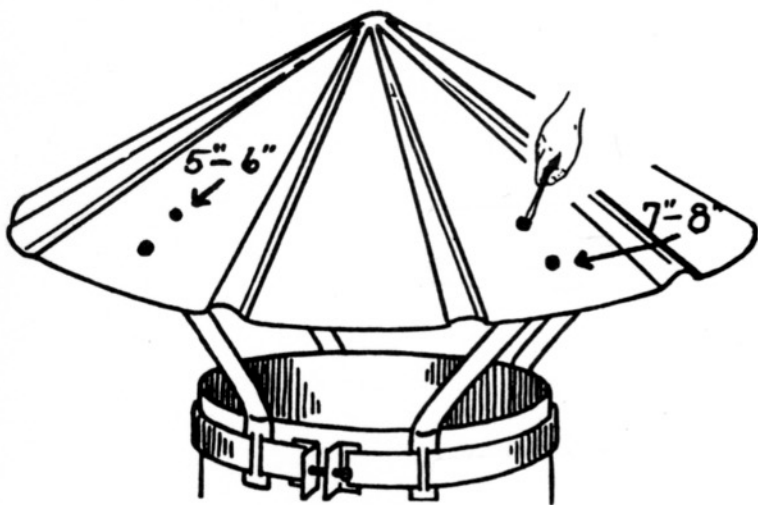


Fig No. 1
Attach braces to top, as shown.



Fig. No. 2
Slip 1" band through
slots as in Fig. No. 2.

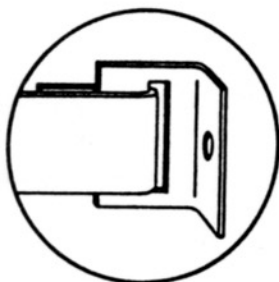


Fig. No. 3
Attach first draw buckle by
bending end of draw band to
inside 1 1/2 or 2 inches.



Fig. No. 4
Attach second draw buckle,
bend excess to inside.

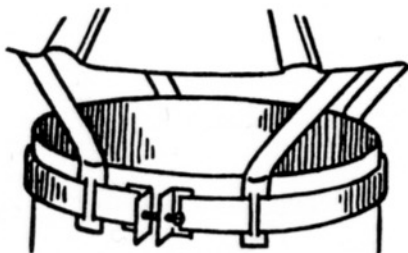


Fig. No. 5
Put over flue liner
and draw in snug.