



INSTRUCTIONS

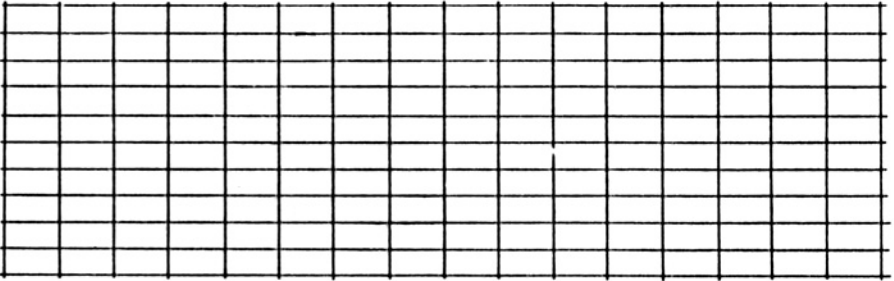


① WIRE IS PACKED FLAT, CUT TO PROPER LENGTH.

② FORM ROUND, TO FIT APPROXIMATE OUTSIDE DIAMETER OF FLUE TILE.

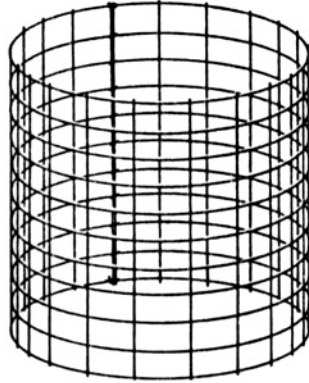

③ INSERT COIL UP AGAINST UNDERSIDE OF COVER AND WIRE TO BRACES.

④ INSTALL COVER.

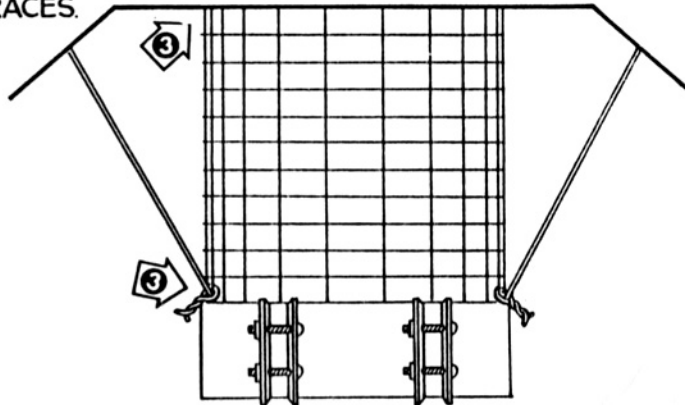

F-8163